

TYDOM 1.0

Installation instructions



	INPUT 100-240V~ 50-60 Hz 0,3A OUTPUT : 5V ~ 1.0 A
	-20°C/+70°C
	-10°C/+40°C
	IP 30
	100 x 100 x 30 mm



The connection quality of the product may be affected by different modifications of the IP architecture on which it operates. These modifications can be, but are not limited to, a change of hardware, a software update or configuration, work conducted on your operator's equipment or any other multimedia equipment such as tablets, smartphones, etc." Android™ and Google are registered trademarks of Google Inc. IOS™ is a registered trademark of Cisco Systems Inc. WiFi is a trademark by Wireless Ethernet Compatibility Alliance. Because of changes in standards and equipment, the characteristics given in the text and the illustrations in this document are not binding unless confirmed.

CE Delta Dore hereby declares that the equipment complies with the essential requirements and other relevant provisions of R&TTE directive 1999/5/EC (wireless).



www.deltadore.com

EN

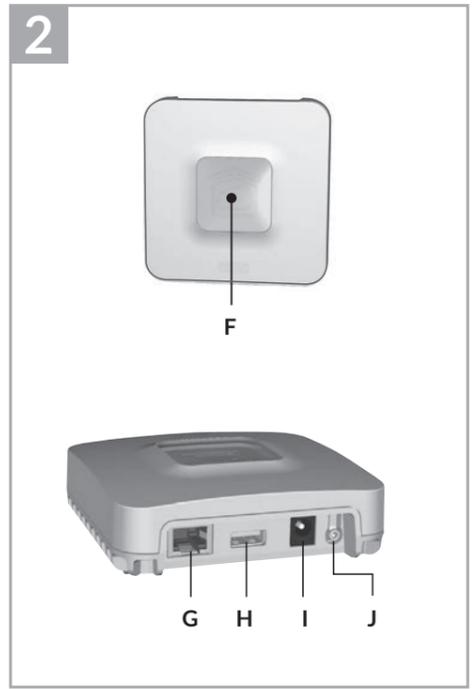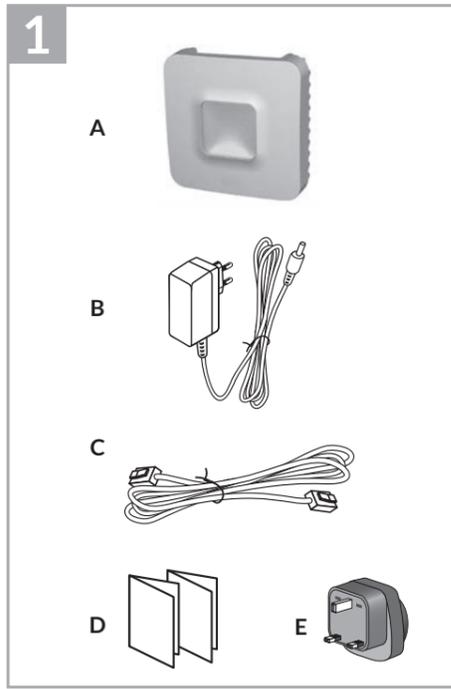

3.1

3.2

3.3

1 Contents

A. TYDOM 1.0
Home automation gateway for application on DELTA DORE TYDOM smartphone and tablet

B. Mains supply

C. Ethernet cable

D. Installation instructions/ Important product information

E. AC adapter

2 Description

F. System status display LED

Connections:

G. Ethernet socket

H. Not used

I. Mains adaptor socket

Button:

J. Configuration/information button

3 Installation

3.1 Connect the TYDOM 1.0 according to your installation

3.2 Download the TYDOM application

- According to the unit: Log in to Google play or App Store
- Search for and download the free "TYDOM" application
- Activate the WIFI connection of your smartphone or tablet.

3.3 Configure the TYDOM application

- Note down the last 6 characters of the MAC address of your TYDOM 1.0.
- Open the TYDOM application.
- Enter the 6 characters (upper case letters) in the "identifier" field then enter your "password" (at least 8 alphanumeric characters).
- Press the "Login" button.
- The home screen is displayed. You are logged in.

4 Information and support

LED	System status
Pulsing green	System accessible locally and remotely, user connected
Green on and steady	System accessible locally and remotely
Pulsing orange	System accessible locally, user connected
Orange on and steady	System accessible locally
Red on and steady	No IP address allocated

Diagnostic function
Briefly press the button (LED displays for 10 seconds)

Flashing yellow	Fixed IP OK
Flashing blue	DHCP OK / Upnp OK
Flashing blue (2x)	DHCP OK / Upnp Error <i>Check the Upnp activation on the BOX</i>
Flashing blue (3x)	DHCP in progress <i>Check the DHCP activation on the BOX</i>

Flashing red	No network connection <i>Check the Ethernet link</i>
--------------	---

Advanced functions

DHCP/Fixed IP	
Press the button for at least 3 seconds	
LED	Action
Flashing magenta (slowly)	Release the button (before 15 seconds)

Preferably use the TYDOM application to access this function.

Delete password	
Press the button for at least 15 seconds	
LED	Action
Flashing magenta (rapidly)	Release the button (before 30 seconds)

RESET	
Press the button for at least 30 seconds	
LED	Action
System status	Release the button → Use of DHCP → Password deletion → Association removal

Product association example

Control system receivers

Alarm

RT 2012 range

Other thermal products

TYBOX 137 example